



# ZAP Technical Instruction



The Smallest, Quietest & Safest Garage Door Operator in the World!



# Accessory Installation



**All Accessories should not be installed until the operator has been fully installed and verified to be operational.**



# Accessory Installation


## 850 Beeper Module





- Materials Needed

- Appropriate operator for door size  
(See model application chart)
  - 850 Beeper Module

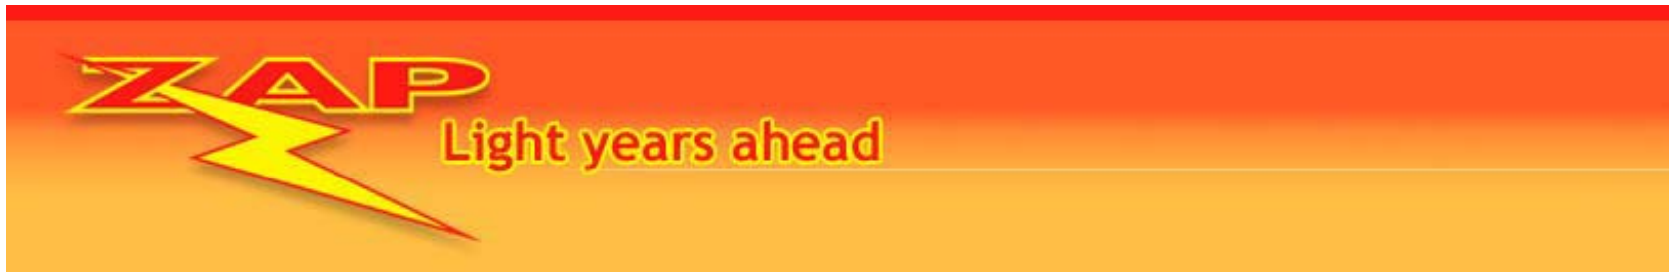


- Series controller applicable to:
  - 800-R, 800-G-II, 800-II, 8800-II, 8800-II-HP, 8850-std/fs



## Accessory Installation 850 Beeper Module

- Purpose
  - Audible annunciation of door activation
  - Programming aid
  - Service Due reminder audible Annunciator
  - Auto-close over-ride Annunciator

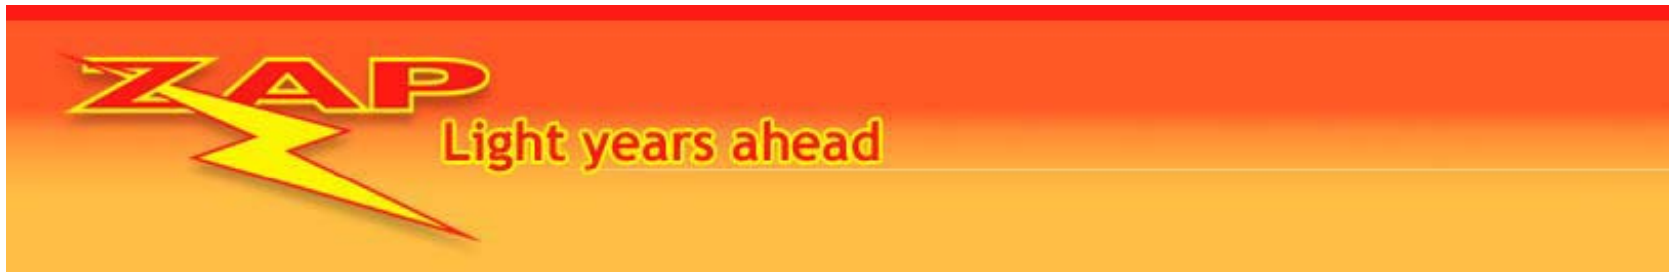

This installation is to be performed after the operator is installed and initial set up has been performed verifying successful installation and calibration of the operator.



- Ensure the case lid cover is set to the service position and the wires are plugged onto the main board.






Locate the terminals labeled buzzer.






Align the 850 Beeper module connector onto to the 3 pin buzzer connection.

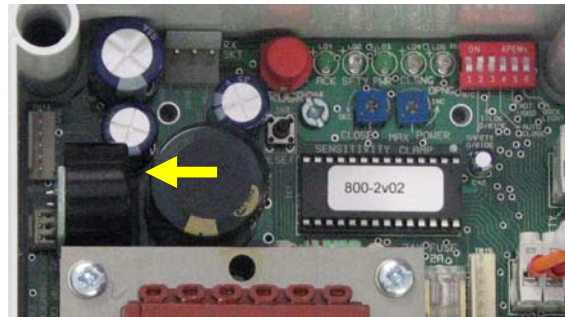



Press into place ensuring that the module seats firmly into place.

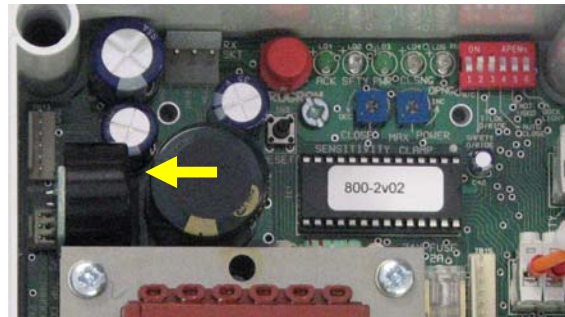



The module 850 Beeper is now ready to use.

